


Tatami Floor Cross Section

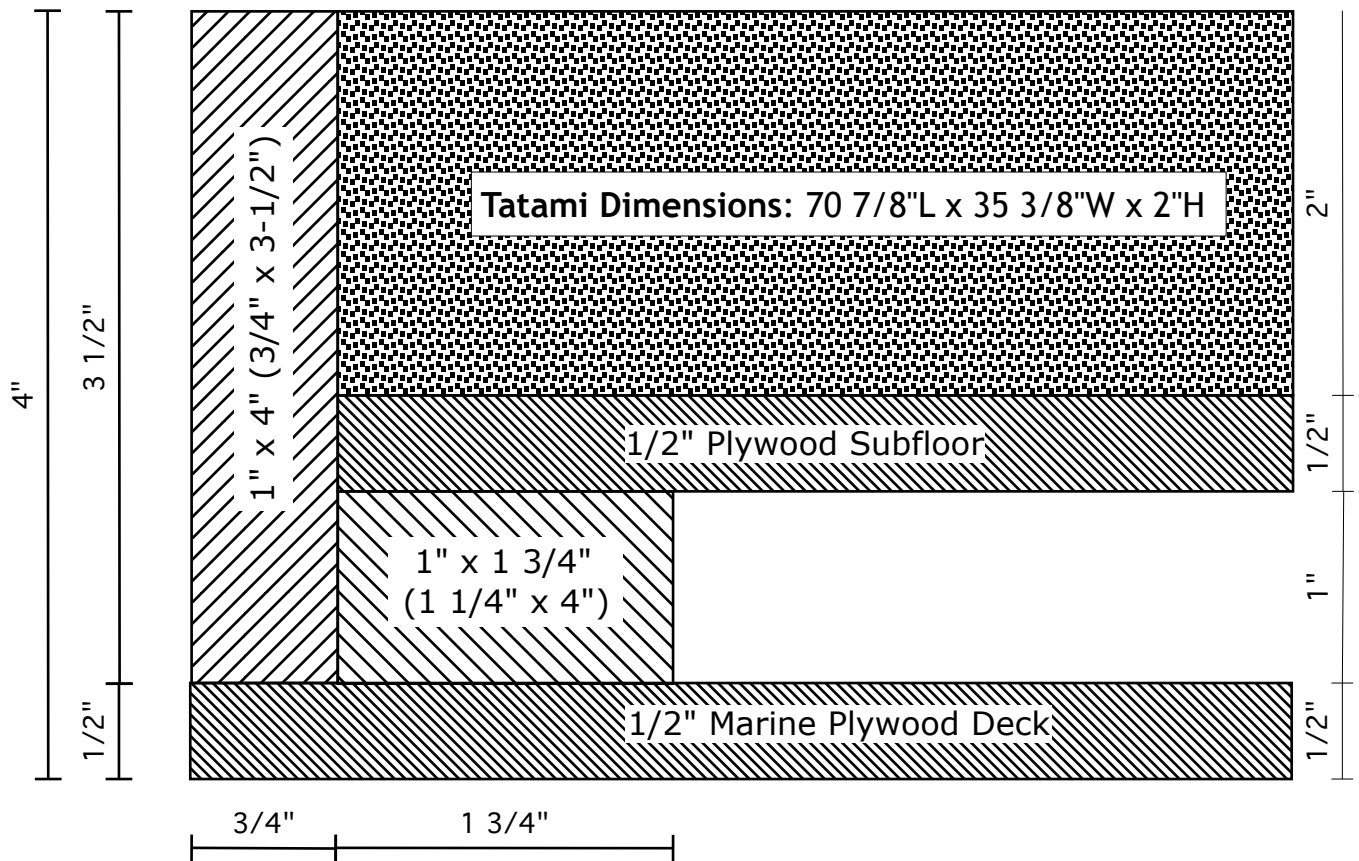

This design requires cork/rubber tape between the floor joists and the plywood subfloor to make up for the $1/32"$ deficit in the plywood. Engel (1964 p. 133) has the wood subfloor rest on $2.5 \times 3.0 \text{ cm} (1 \times 1.25")$ "eda" with 9" centers.

Wood Floor Cross Section

